


## 【USB メモリー差込位置】

•ECOSYS M5526cdw

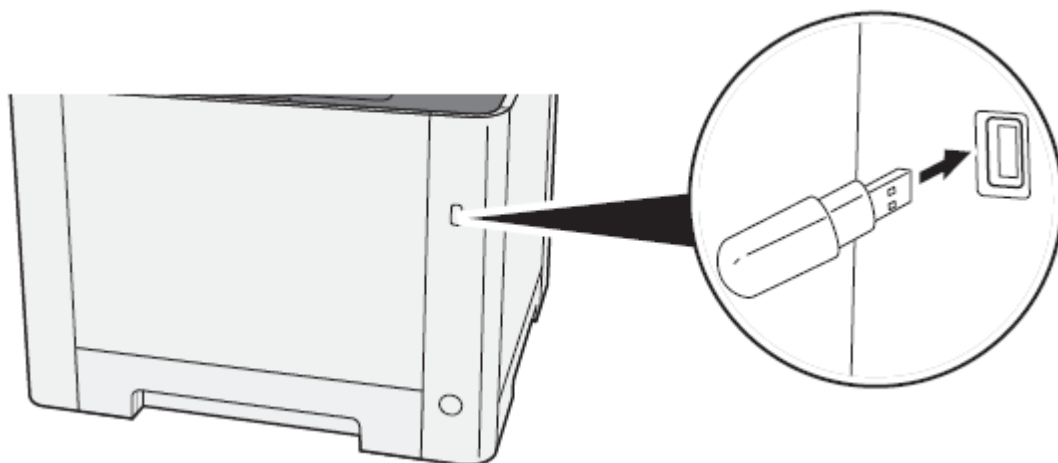


•ECOSYS M6526cidn

•ECOSYS M6526cdn


•FS-C2626MFP

•FS-C2126/2026MFP

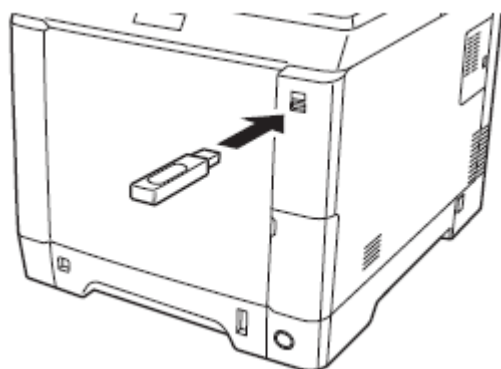


•ECOSYS M6535cidn

•ECOSYS M6530cdn

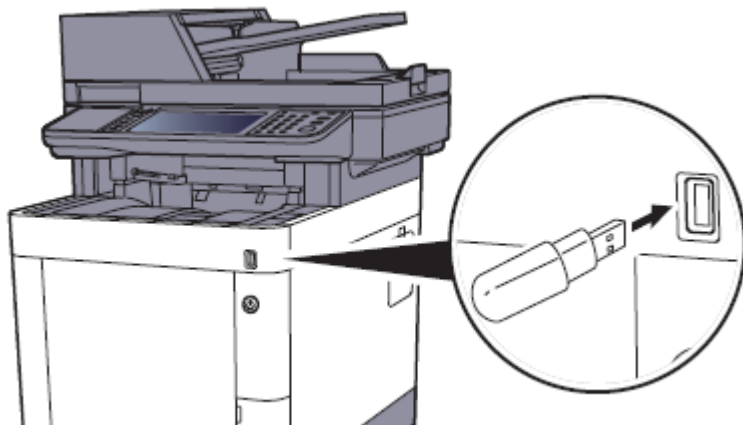


•ECOSYS M6635cidn


•TASKalfa 352ci

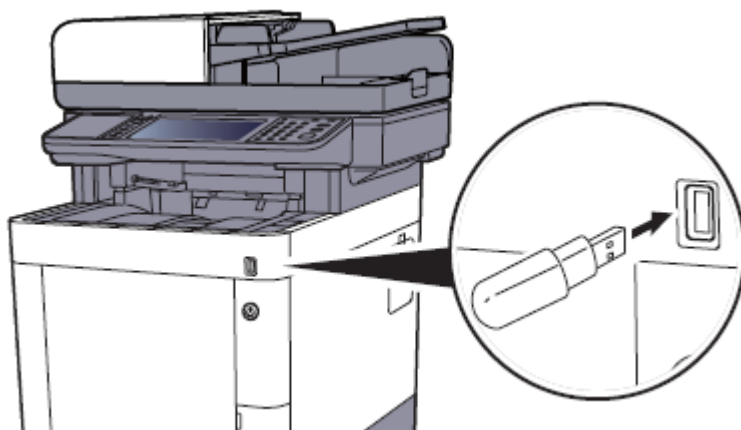


- ECOSYS M2640idw
- ECOSYS M2540dw
- ECOSYS MA4000wfx

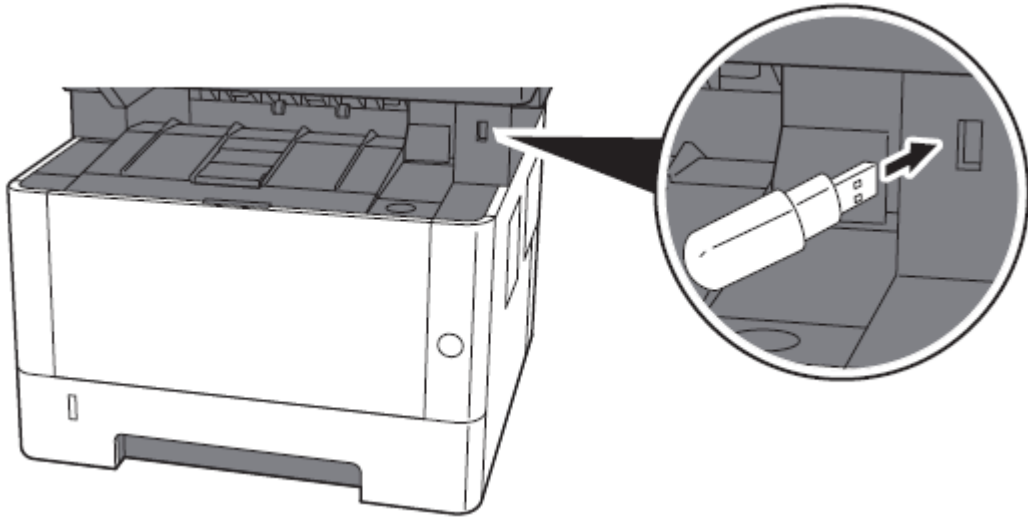

- ECOSYS M3540idn

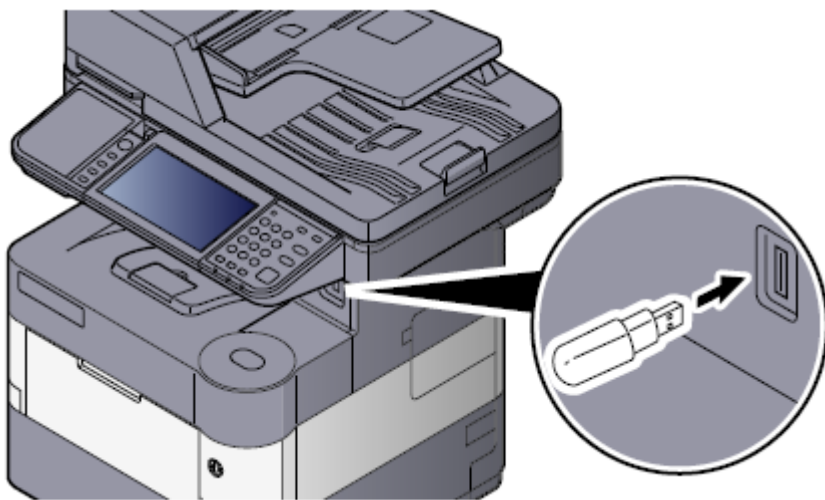


•ECOSYS M3645idn

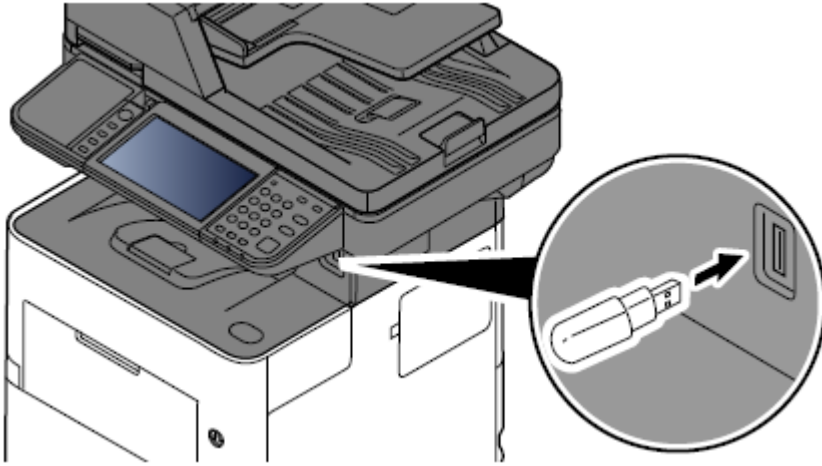


•LS-3640MFP

•LS-3140MFP

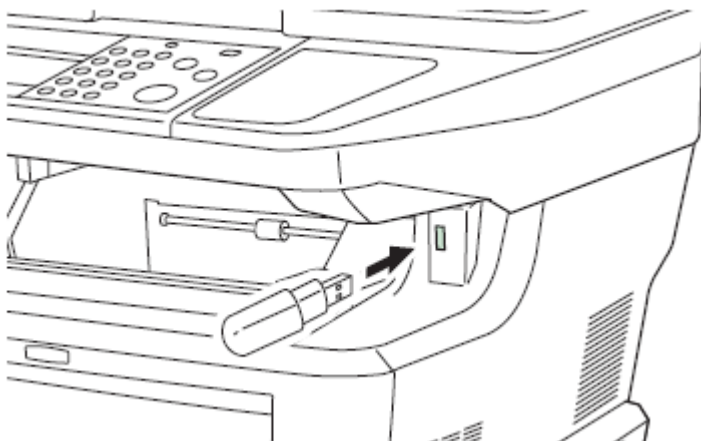

•ECOSYS M2535dn

•LS-1135/1035MFP

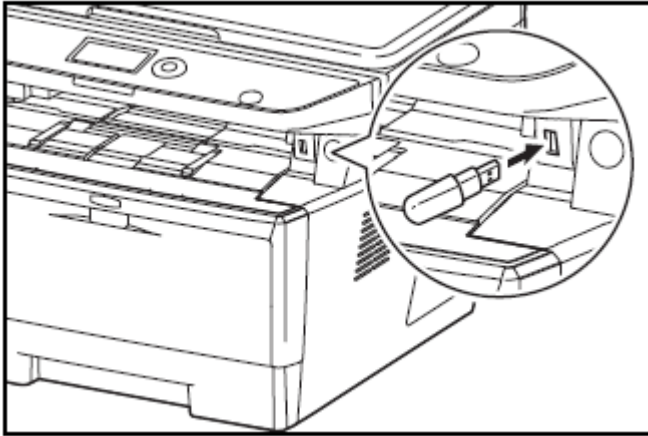

•LS-1128/1028MFP

